


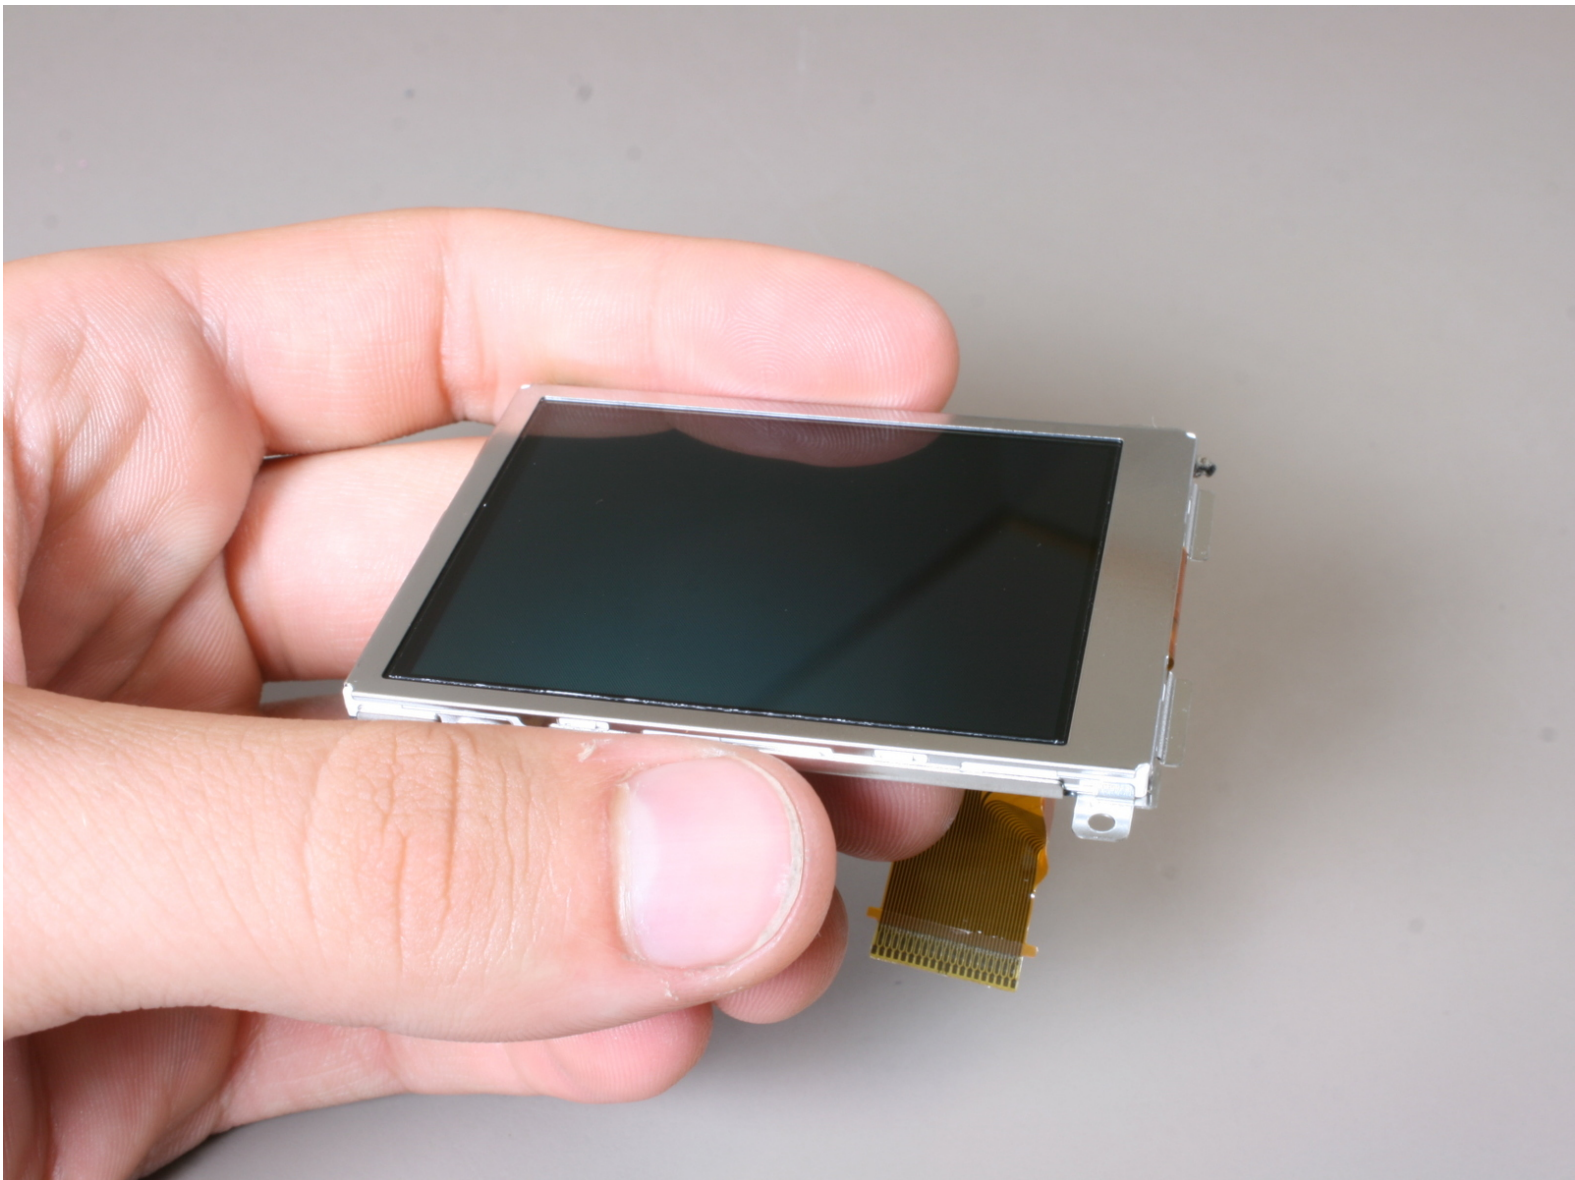

# Polaroid i533 LCD Screen Replacement

This guide is how to replace the LCD screen on the Polaroid i533.

Written By: ashley





## TOOLS:


- [iFixit Opening Tools](#) (1)
  - [64 Bit Driver Kit](#) (1)
-

## Step 1 — LCD Screen



- On the left-hand side of the camera, unscrew and remove the four 3mm screws, as shown in the photograph.
- On the right-hand side of the camera, unscrew and remove the two 3mm screws.
- On the bottom of the camera, unscrew and remove the three 3mm screws.

## Step 2

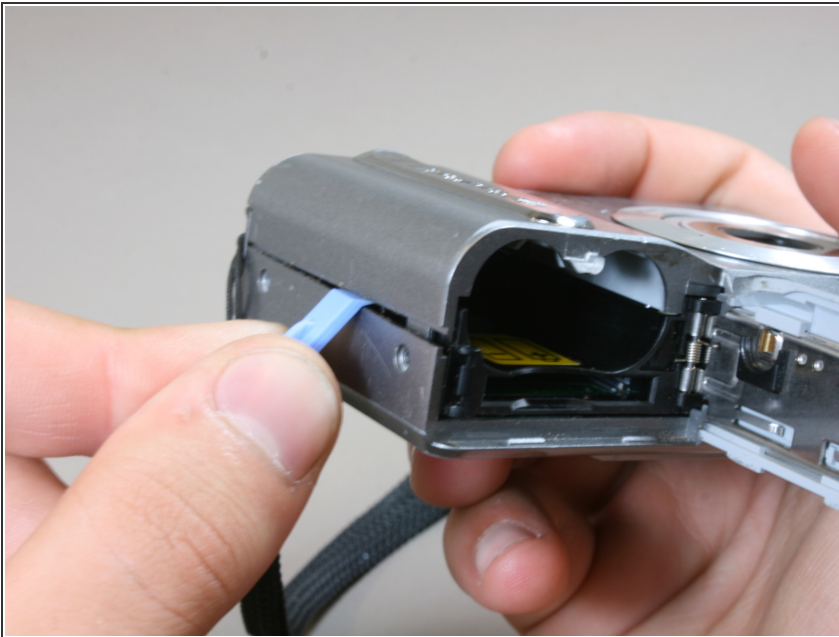

- Slide open the battery door and use a plastic opening tool to slightly open the side of the case.




### Step 3



- ⚠ When performing the next step, be sure to not pull the cover off completely because it is still attached to the logic board.
- Gently pull the cover with the LCD screen attached away from the rest of the camera.

### Step 4

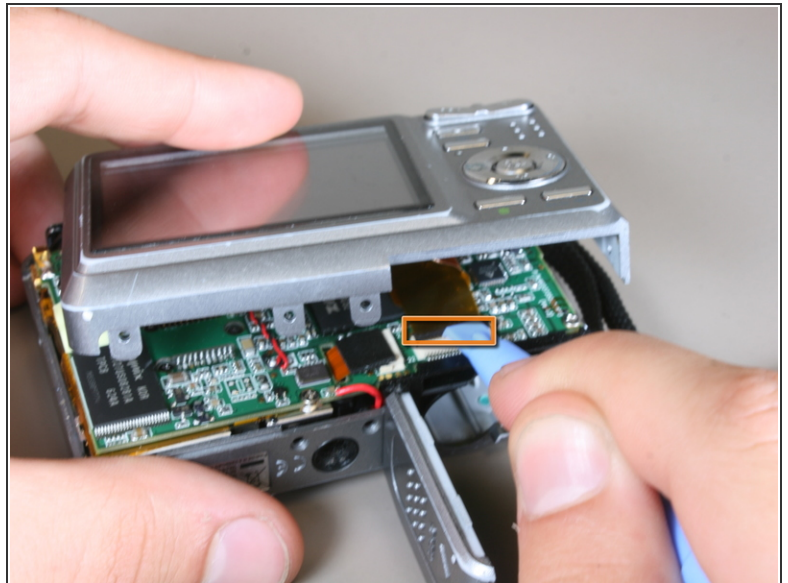


- Locate where the LCD screen ribbon is attached to the logic board.
- Using a plastic opening tool, flip the black tab that connects the LCD screen ribbon to the logic board up.

## Step 5




- Gently pull the ribbon away from the logic board.

## Step 6

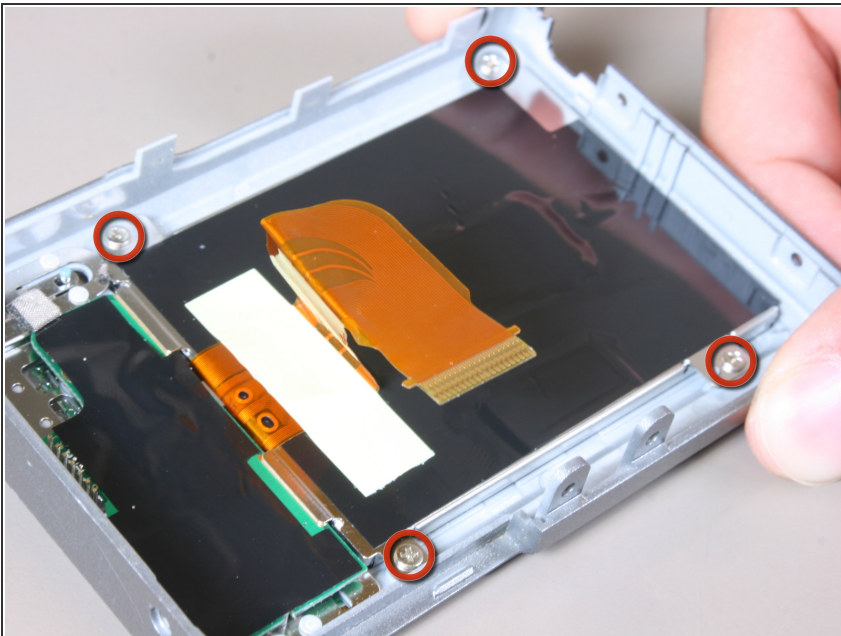

- Locate the four screws in each corner of the LCD screen, unscrew and remove these screws.

## Step 7

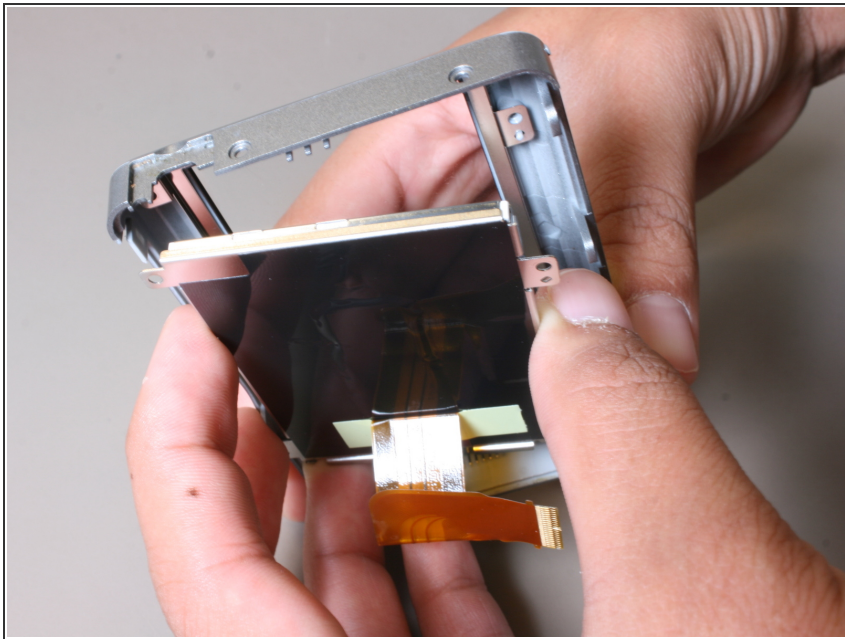

- Remove the LCD screen from the remaining casing of the camera.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-23 09:14:21 PM.